




# CROSSWIND CHART

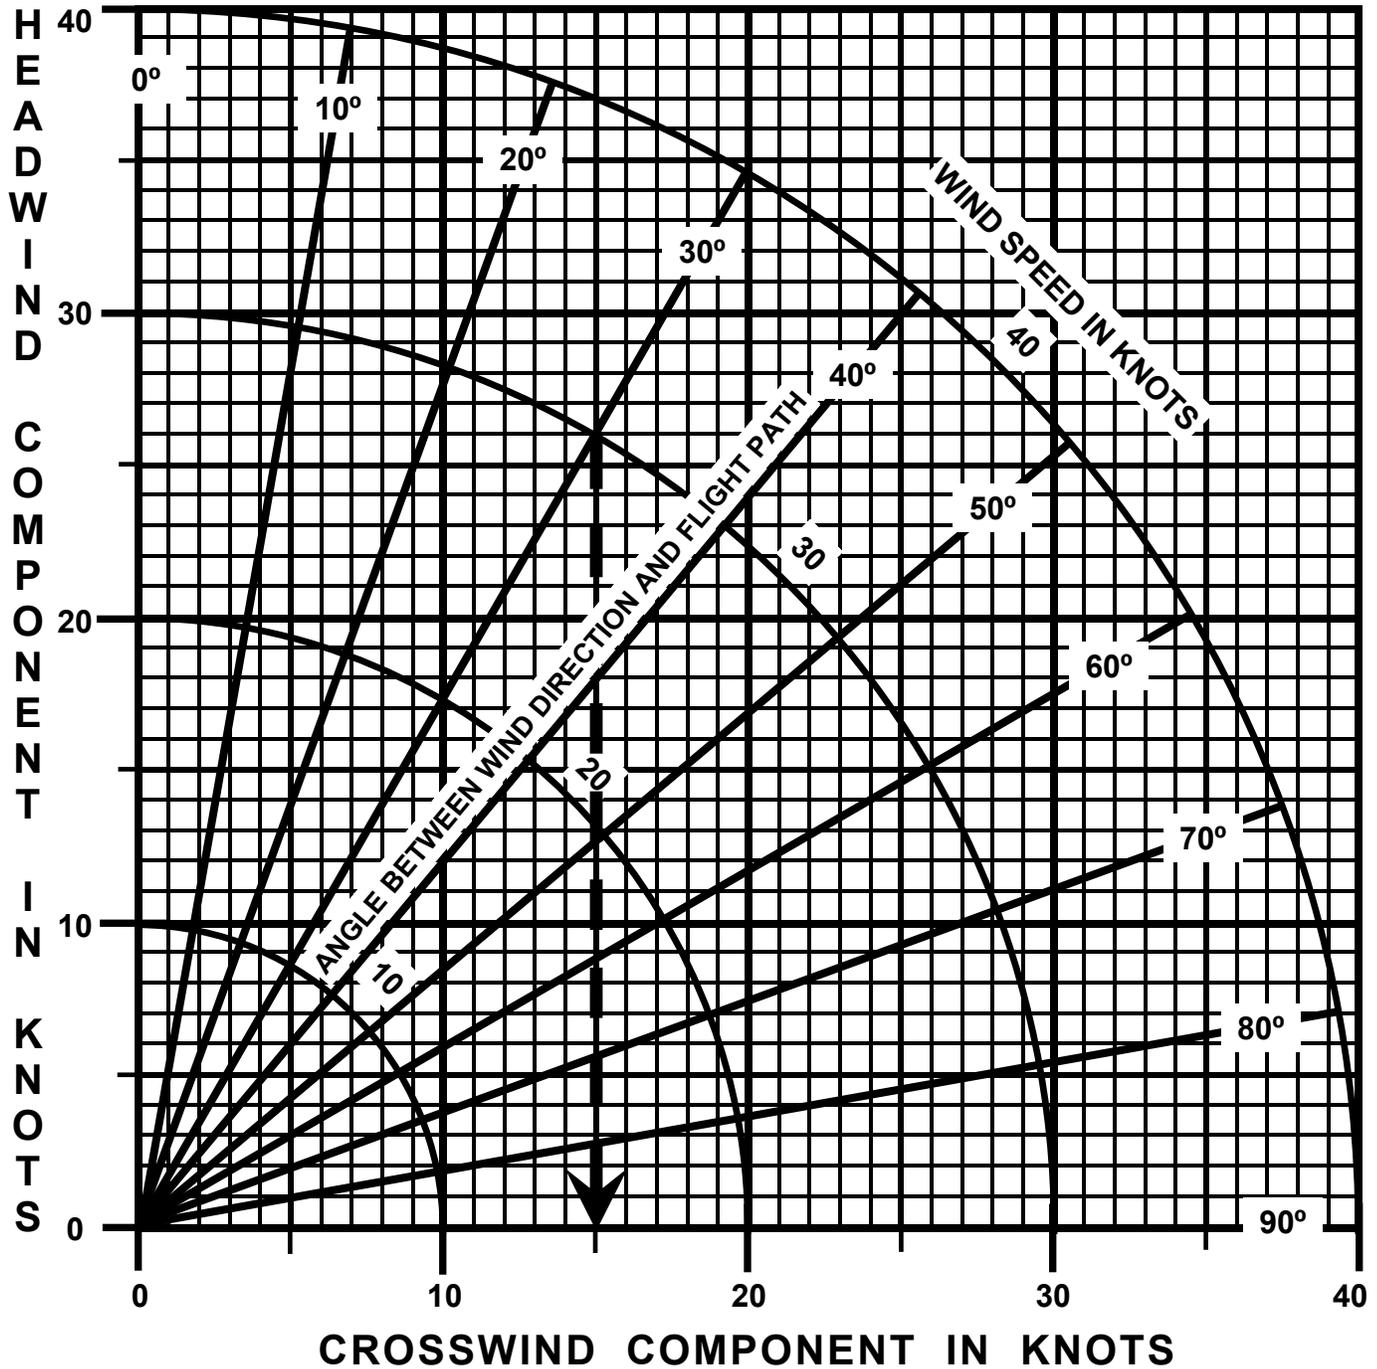

**INSTRUCTIONS:** Select the headwind component along the left side, and follow the curved line representing the headwind component until it intersects the angled straight line representing the degrees off the runway centerline the wind is coming from. Travel straight down to the bottom of the chart to find the crosswind component. In the example, there is a 30 knot headwind at a 30° angle to the runway, yielding a crosswind component of 15 knots – the legal maximum for CAP flight.